


# ***hama***®

THE SMART SOLUTION

Selfie

"Fun 70 BT"

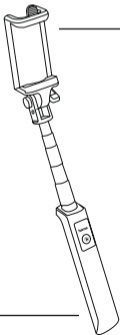



Operating Instructions

**GB**

Bedienungsanleitung

**D**



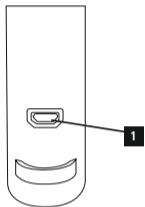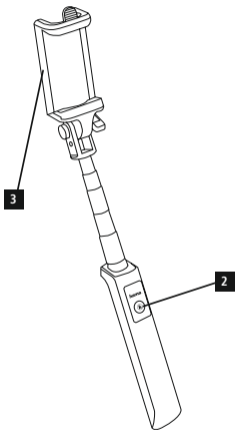

A line drawing of the handle of the device, showing a button with a circular icon. A callout box with the number 2 points to this button.

2

## Controls and Displays

### A

1. USB charging port

### B

2. Status LED,  
**ON/OFF** switch = activates Bluetooth remote release; takes a photo, video or triggers continuous shooting, Remote release
3. Smartphone bracket

Thank you for choosing a Hama product. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, please pass these operating instructions on to the new owner.

## 1. Explanation of Warning Symbols and Notes



### Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



### Note

This symbol is used to indicate additional information or important notes.

## 2. Package Contents

- Selfie Fun 70 BT
- USB charging cable
- These operating instructions

## 3. Safety Notes

- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not use the product in moist environments and avoid splashes.
- Do not drop the product and do not expose it to any major shocks.
- Dispose of packaging material immediately according to locally applicable regulations.
- Since the battery is integrated and cannot be removed, you will need to dispose of the product as a whole. Do this in compliance with the legal requirements.

- Do not open the device or continue to operate it if it becomes damaged.
- Do not modify the product in any way. Doing so voids the warranty.

#### 4. System Requirements

The Selfie Fun 70 BT supports Bluetooth-capable terminal devices such as smartphones and tablet PCs that use the iOS 5 or Android 3.0 (or newer) operating systems.

##### Note

- Note that some terminal devices may not support this product.
- Please refer to the operating instructions for the device you are using.

#### 5. Getting Started

##### Warning – Battery

- Only use suitable charging devices or USB connections for charging.
- As a rule, do not charge devices or USB connections that are defective and do not try to repair them yourself.

- Do not overcharge the product or allow the battery to completely discharge.
- Avoid storing, charging or using batteries in extreme temperatures.
- When stored over a long period of time, batteries should be charged regularly (at least every three months).

- The product is equipped with a built-in battery.
- Charge the battery fully before using the device for the first time.
- To charge the battery, use the included USB charging cable to connect the Micro USB charging port on the product (1) to a USB charger or the USB port of your notebook/computer (must be switched on).
- The status LED (2) illuminates red while the battery is charging and switches off once the battery is fully charged. If the battery is dead, the status LED (2) goes out.

##### Warning – Charging

- As a rule, do not charge devices or USB connections that are defective and do not try to repair them yourself.

---

## 6. Operation

### Note

- The functions described in this section are only available for Bluetooth-capable terminal devices.
- Note that the max. range of Bluetooth without any obstacles such as walls, people, etc. is 10 metres.

### 6.1. Bluetooth connection

#### Note - Pairing

- Make sure that your Bluetooth-capable terminal device is on and Bluetooth is activated.
- Make sure that your Bluetooth-capable terminal device is visible for other Bluetooth devices.
- For more information, please refer to the operating instructions of your terminal device.

- Press and hold the **ON/OFF** switch for about 3 seconds.
- The status LED (2) begins to flash blue. This means the Bluetooth remote release is searching for a Bluetooth connection.
- This means the Bluetooth remote release is searching for a Bluetooth connection.
- Open the Bluetooth settings on your terminal device and wait until **hama Selfie Fun** appears in the list of Bluetooth devices found.
- Select **hama Selfie Fun** and wait until **hama Selfie Fun** is listed as connected in the Bluetooth settings on your terminal device. The status LED (2) glows blue.

#### Note - automatic connection and possible problems

After the devices have been paired once, the connection is then established automatically. If the Bluetooth connection is not established automatically, check the following:

- 
- Check the Bluetooth settings of your terminal device to see whether **hama Selfie Fun** is connected. If it is not, repeat the steps described above.
  - Check whether obstacles are impairing the range. If so, move the devices closer together.
  - Low battery charge can impair the connection. Fully charge the battery if necessary.
  - Only one Bluetooth device can be connected at a time. If there is an active connection to another device, deactivate this connection and try again.

## 6.2. Remote release function

- Once you have established the Bluetooth connection, open the camera function on your terminal device and select the desired camera (front or rear camera), if applicable.
- Mount the smartphone in the bracket (3) and ensure that it is secure.
- Extend the Selfie Fun 70 BT telescopic pole to the desired length.
- Press the **release button** (2) to trigger the selected function (selfie, photo, video).

## 7. Care and Maintenance

Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents. Make sure that water does not get into the product.

## 8. Warranty Disclaimer

Hama GmbH & Co. KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

## 9. Service und Support

Please contact Hama Product Consulting if you have any questions about this product.

Hotline: +49 9091 502-115 (German/English)

Further support information can be found here:

[www.hama.com](http://www.hama.com)

## 10. Technical Data

Bluetooth version	3.0 and newer
Bluetooth Class	Class 2
Bluetooth Range	max. 10 m
Extension	20,5 - 70 cm
Battery capacity	55 mAh
Charging time	ca. 2h

## 11. Recycling Information

### Note on environmental protection:



After the implementation of the European Directive 2012/19/EU and 2006/66/EU in the national legal system, the following applies: Electric and electronic devices as well as batteries must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject

to these regulations. By recycling, reusing the materials or other forms of utilising old devices/batteries, you are making an important contribution to protecting our environment.

## 12. Declaration of Conformity



Hereby, Hama GmbH & Co KG declares that the radio equipment type [00183396] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.hama.com/00183396/Downloads](http://www.hama.com/00183396/Downloads).

Frequency band(s)	2.40 – 2.48 GHz
Maximum radio-frequency power transmitted	0.64 mW



## Bedienungselemente und Anzeigen

### A

1. USB-Ladebuchse

### B

2. Status LED,  
**ON/OFF** Schalter= Aktivierung  
Bluetooth-Fernauslöser / Foto-/  
Video-/ Serienaufnahme,  
Auslöser
3. Smartphone Halterung

Vielen Dank, dass Sie sich für ein Hama Produkt entschieden haben! Nehmen Sie sich Zeit und lesen Sie die folgenden Anweisungen und Hinweise zunächst ganz durch. Bewahren Sie diese Bedienungsanleitung anschließend an einem sicheren Ort auf, um bei Bedarf darin nachschlagen zu können. Sollten Sie das Gerät veräußern, geben Sie diese Bedienungsanleitung an den neuen Eigentümer weiter.

## 1. Erklärung von Warnsymbolen und Hinweisen



### Warnung

Wird verwendet, um Sicherheitshinweise zu kennzeichnen oder um Aufmerksamkeit auf besondere Gefahren und Risiken zu lenken.



### Hinweis

Wird verwendet, um zusätzlich Informationen oder wichtige Hinweise zu kennzeichnen.

## 2. Packungsinhalt

- Selfie Fun 70 BT
- USB Ladekabel
- diese Bedienungsanleitung

## 3. Sicherheitshinweise

- Schützen Sie das Produkt vor Schmutz, Feuchtigkeit und Überhitzung und verwenden Sie es nur in trockenen Umgebungen.
- Benutzen Sie das Produkt nicht in Bereichen, in denen elektronische Produkte nicht erlaubt sind.
- Verwenden Sie das Produkt nicht in einer feuchten Umgebung und vermeiden Sie Spritzwasser.
- Lassen Sie das Produkt nicht fallen und setzen Sie es keinen heftigen Erschütterungen aus.
- Entsorgen Sie das Verpackungsmaterial sofort gemäß den örtlich gültigen Entsorgungsvorschriften.

- Der Akku ist fest eingebaut und kann nicht entfernt werden, entsorgen Sie das Produkt als Ganzes gemäß den gesetzlichen Bestimmungen.
- Öffnen Sie das Produkt nicht und betreiben Sie es bei Beschädigungen nicht weiter.
- Nehmen Sie keine Veränderungen am Produkt vor. Dadurch verlieren sie jegliche Gewährleistungsansprüche.

#### 4. Systemvoraussetzungen

Die Selfie Fun 70 BT Bluetooth unterstützt Bluetooth-fähige Endgeräte wie Smartphones und Tablet-PCs, auf denen die Betriebssysteme iOS 5 bzw. Android 3.0 oder neuere Versionen installiert sind.



#### Hinweis

- Beachten Sie, dass die Unterstützung des Produktes von Ihrem Endgerät abhängig ist.
- Beachten Sie dazu die Bedienungsanleitung Ihres verwendeten Endgerätes.

#### 5. Inbetriebnahme



#### Warnung – Akku

- Verwenden Sie nur geeignete Ladegeräte oder USB-Anschlüsse zum Aufladen.
  - Verwenden Sie defekte Ladegeräte oder USB-Anschlüsse generell nicht mehr und versuchen Sie nicht, diese zu reparieren.
  - Überladen oder tiefentladen Sie das Produkt nicht.
  - Vermeiden Sie Lagerung, Laden und Benutzung bei extremen Temperaturen.
  - Laden Sie bei längerer Lagerung regelmäßig (mind. vierteljährig) nach.
- 
- Das Produkt verfügt über einen fest eingebauten Akku.
  - Laden Sie den Akku vor dem ersten Gebrauch zunächst einmal vollständig auf.
  - Verbinden Sie zum Laden die Micro-USB Ladebuchse des Produkts (1) mithilfe des beiliegenden USB Ladekabels mit einem USB-Ladegerät oder einem USB Anschluss Ihres eingeschalteten Notebooks/Computers.

- Die Status LED (2) leuchtet bei aktivem Ladevorgang rot und erlischt, sobald der Akku vollständig geladen ist. Bei verbrauchtem Akku erlischt die Status-LED (2).



### Warnung – Laden

- Verwenden Sie defekte Ladegeräte oder USB-Anschlüsse generell nicht mehr und versuchen Sie nicht, diese zu reparieren.

## 6. Betrieb



### Hinweis

- Die in diesem Kapitel beschriebenen Funktionen sind nur mit Bluetooth-fähigen Endgeräten möglich.
- Beachten Sie, dass die Reichweite von Bluetooth max. 10 Meter beträgt, ohne Hindernisse wie Wände, Personen, etc.

## 6.1. Bluetooth Verbindung



### Hinweis – Pairing

- Stellen Sie sicher, dass Ihr Bluetooth-fähiges Endgerät eingeschaltet ist und dass Bluetooth aktiviert ist.
  - Stellen Sie sicher, dass Ihr Bluetooth-fähiges Endgerät für andere Bluetooth Geräte sichtbar ist.
  - Beachten Sie hierzu die Bedienungsanleitung Ihres Endgerätes.
- 
- Drücken und halten Sie den **ON/OFF** Schalter für ca. 3 Sekunden.
  - Die Status LED (2) beginnt blau zu blinken. Der Bluetooth-Fernauslöser sucht nach einer Bluetooth Verbindung.
  - Öffnen Sie auf Ihrem Endgerät die Bluetooth Einstellungen und warten Sie bis in der Liste der gefundenen Bluetooth Geräte **hama Selfie Fun** angezeigt wird.
  - Wählen Sie **hama Selfie Fun** aus und warten Sie bis **hama Selfie Fun** als verbunden in den Bluetooth Einstellungen Ihres Endgerätes angezeigt wird. Die Status LED (2) leuchtet blau.

**i Hinweis – automatische Verbindung und evtl. Beeinträchtigungen**

Nach einer erfolgreichen Erstverbindung erfolgt die Verbindung automatisch. Sollte sich die Bluetooth Verbindung nicht automatisch wiederherstellen, prüfen Sie die folgenden Punkte:

- Kontrollieren Sie in den Bluetooth Einstellungen des Endgerätes, ob **hama Selfie Fun** verbunden ist. Wenn nicht, wiederholen Sie die oben genannten Schritte.
- Kontrollieren Sie, ob Hindernisse die Reichweite beeinträchtigen. Wenn ja, positionieren Sie die Geräte näher zueinander.
- Ein verbrauchter Akku kann die Verbindung beeinträchtigen. Laden Sie ggf. den Akku vollständig auf.
- Es kann immer nur ein Bluetooth-Gerät verbunden sein. Sollten sie noch mit einem anderen Gerät aktiv verbunden sein, trennen Sie diese Verbindung und versuchen Sie es dann erneut.

## 6.2. Fernauslösefunktion

- Öffnen Sie nach erfolgreicher Bluetooth Verbindung die Kamerafunktion auf Ihrem Endgerät und wählen Sie ggf. die gewünschte Kamera aus (Front- oder Rückkamera).
- Befestigen Sie das Smartphone in der Halterung (3) und achten Sie darauf, dass es sicher befestigt ist.
- Ziehen Sie die Selfie Fun 70 BT Teleskopstange auf die gewünschte Länge aus.
- Drücken Sie die **Auslösetaste** (2), um die ausgewählte Aufnahmefunktion (Selfie, Foto, Video) auszulösen.

## 7. Wartung und Pflege

Reinigen Sie dieses Produkt nur mit einem fusselfreien, leicht feuchten Tuch und verwenden Sie keine aggressiven Reiniger. Achten Sie darauf, dass kein Wasser in das Produkt eindringt.

## 8. Haftungsausschluss

Die Hama GmbH & Co. KG übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die aus unsachgemäßer Installation, Montage und unsachgemäßem Gebrauch des Produktes oder einer Nichtbeachtung der Bedienungsanleitung und/oder der Sicherheits hinweise resultieren.

## 9. Service und Support

Bitte wenden Sie sich bei Fragen zum Produkt gerne an die Hama-Produktberatung.

Hotline: +49 9091 502-115 (Deu/Eng)

Weitere Supportinformationen finden sie hier: [www.hama.com](http://www.hama.com)

## 10. Technische Daten

Bluetooth Version	3.0 u. neuer
Bluetooth Class	Class 2
Bluetooth Reichweite	max. 10 m
Auszug	20,5 - 70 cm
Akkukapazität	55 mAh
Ladezeit	ca. 2 Std.

## 11. Entsorgungshinweise

### Hinweis zum Umweltschutz:



Ab dem Zeitpunkt der Umsetzung der europäischen Richtlinien 2012/19/EU und 2006/66/EG in nationales Recht gilt folgendes:

Elektrische und elektronische Geräte sowie Batterien dürfen nicht mit dem Hausmüll entsorgt werden. Der Verbraucher ist

gesetzlich verpflichtet, elektrische und elektronische Geräte sowie Batterien am Ende ihrer Lebensdauer an den dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle zurückzugeben. Einzelheiten dazu regelt das jeweilige Landesrecht. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist auf diese Bestimmungen hin. Mit der Wiederverwertung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten/Batterien leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.

## 12. Konformitätserklärung



Hiermit erklärt die Hama GmbH & Co KG, dass der Funkanlagentyp [00183396] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: [www.hama.com/00183396/Downloads](http://www.hama.com/00183396/Downloads).

Frequenzband/ Frequenzbänder	2,40 – 2,48 GHz
Abgestrahlte maximale Sendeleistung	0,64 mW

# ***hama***<sup>®</sup>

**Hama GmbH & Co KG**  
86652 Monheim / Germany

## **Service & Support**

 [www.hama.com](http://www.hama.com)

 +49 9091 502-115

**D**

**GB**

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hama GmbH & Co KG is under license. Other trademarks and trade names are those of their respective owners.



**CE**

[www.hama.com/nep](http://www.hama.com/nep)

All listed brands are trademarks of the corresponding companies.  
Errors and omissions excepted, and subject to technical changes.  
Our general terms of delivery and payment are applied.

00183396/04.19